


REMOVE FRONT DOOR HANDLE ASSEMBLY OUTSIDE LH

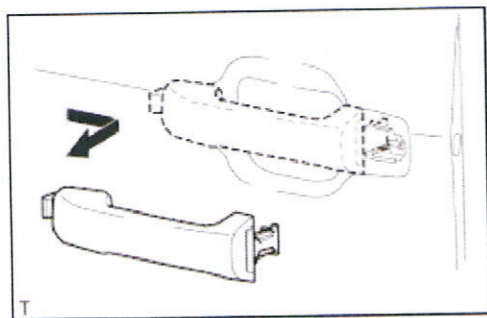


- (a) Remove the handle by sliding and pulling it in the direction indicated by the arrow in the illustration.

NOTICE:

If the release plate is not pulled and held when removing the handle, the release plate will interfere with the handle and become damaged.

REMOVE FRONT DOOR OUTSIDE HANDLE COVER LH

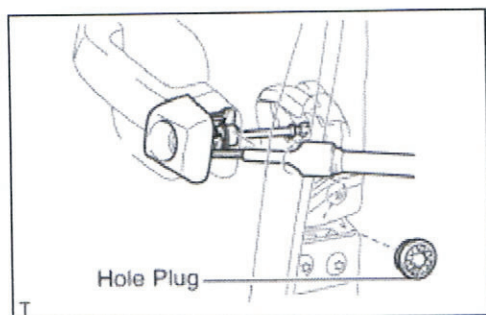


(a) Remove the hole plug.

(b) Using a T30 "TORX" wrench, loosen the screw and remove the front door outside handle cover and the door lock key cylinder as a unit.

(c) Remove the cylinder from the cover.

NOTICE:

- When reusing a door lock that has been removed, replace the packing in the connecting part with new packing.
- Be careful that no grease or dirt sticks to the packing surface in the connecting part.
- Reusing removed packing or using damaged packing will allow water to penetrate through to the connecting part, resulting in a malfunction of the door lock.

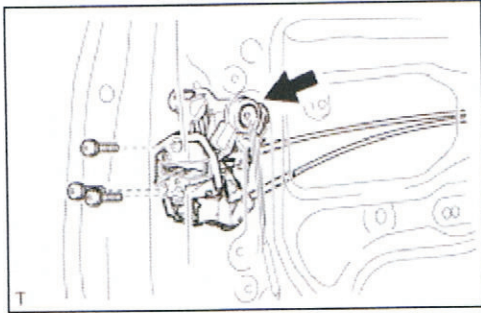


(c) Using a T30 "TORX" wrench, install the door lock with the 3 screws.

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

(d) Connect the door lock connector.


INSTALL FRONT DOOR LOCK ASSEMBLY LH (w/o Power Door Lock)

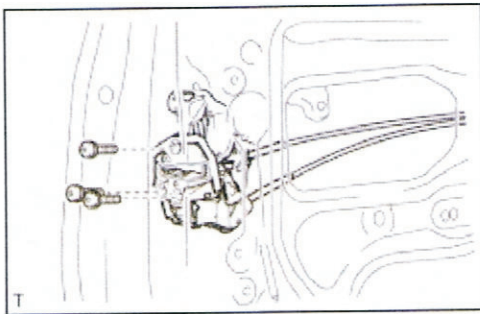

(a) Using a T30 "TORX" wrench, install the door lock with the 3 screws.

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

INSTALL FRONT DOOR OUTSIDE HANDLE COVER LH

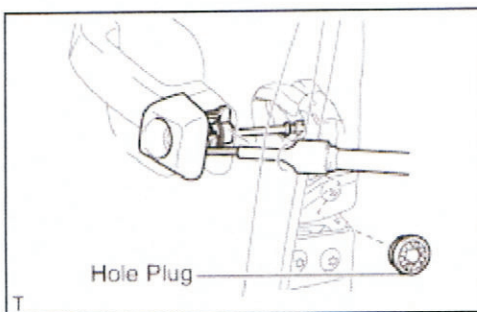


(a) Using a T30 "TORX" socket, install the cover (with the door key cylinder) with the screw.

Torque: 4.0 N·m (41 kgf·cm, 35 in·lbf)

(b) Install the hole plug.

INSTALL FRONT DOOR HANDLE ASSEMBLY OUTSIDE LH

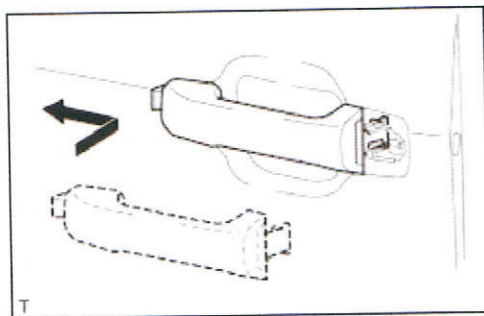


- (a) Install the handle by pushing it in the direction of the arrow in the illustration.


NOTICE:

If the bellcrank lever is not pulled and held when installing the handle, the bellcrank lever will interfere with the handle and become damaged.

INSTALL FRONT DOOR INSIDE LOCKING CABLE ASSEMBLY LH

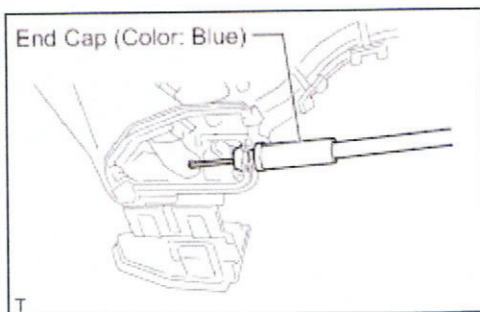


- (a) Install the front door inside locking cable.

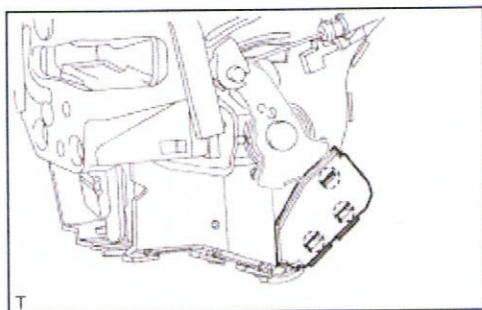

- (b) Attach the 3 claws.

INSTALL FRONT DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH

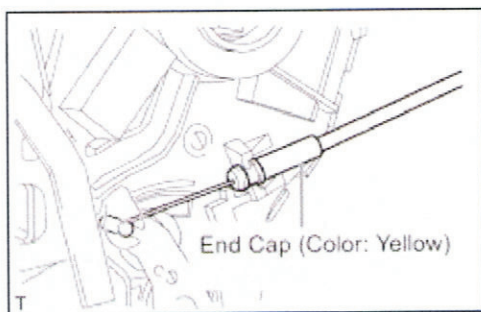

- (a) Install the front door lock remote control cable.

INSTALL FRONT DOOR LOCK ASSEMBLY LH (w/ Power Door Lock)

- (a) Apply MP grease to the sliding and rotating areas of the door lock.
(b) Install a new door lock wire harness packing to the door lock.